

I'm not a bot



Aroma 6-cup rice cooker instructions

Cooking rice doesn't have to be difficult, with the Aroma Rice Cooker 6 Cup making it simple to produce tender white rice quickly and easily This easy-to-follow manual provides step-by-step instructions for using the cooker correctly and achieving perfect results every time The included measuring cup and water ratio guide you in creating delicious white rice. When unboxing the cooker, familiarize yourself with all the components including the 6-cup cooker, nonstick inner pot, steaming tray, measuring cup, plastic stirring spatula, and instruction booklet Assemble the components by lining up the inner pot and securing it properly Add food to the steamer tray for steaming various types of food. To use the cooker plug it in, turn it on, and select your desired cooking setting with options such as Brown Rice, White Rice, Jambalaya, Soup, and Steam simply press the button for your setting Then add ingredients according to the recipe using the measuring cup to fill with water or broth, adding white rice and other recommended ingredients Next set a timer as overcooking can happen quickly Use the digital timer display on the front with up to 24 hours to ensure perfect cooking time Press 'Start' and let the cooker do the work The Aroma Rice Cooker 6 Cup makes cooking rice a breeze. After the timer goes off and your dish is cooked, release any excess steam from the vent to prevent overcooking. Once done, fluff your rice using the provided spatula and serve. To maintain the cooker's longevity, clean it regularly by washing removable parts in hot soapy water or the dishwasher, and wipe down the exterior before storing. Additionally, store the cooker in a dry location away from direct sunlight to prolong its lifespan. For optimal performance, refer to your instruction manual for specific storage guidelines. When using the Aroma Rice Cooker 6 Cup, always follow basic safety precautions: • Always read instructions carefully before first use. • Avoid touching hot surfaces; instead, use handles or knobs. • Use the appliance on a level, dry, and heat-resistant surface. • Never immerse the cord, plug, or appliance in water or liquids to prevent electrical shock and fire hazards. • Keep children away from the appliance during use. • Unplug the unit when not in use and before cleaning. • Do not operate the appliance with damaged cords or plugs, or if it has malfunctioned. • Avoid using unauthorized attachments that may cause fires or injuries. • Never use the appliance outdoors or near hot surfaces. 1. Ensure the longer power cord is placed so it won't fall over counters or tables and be pulled by kids or tripped on. 2. Use only a polarized outlet that fits this plug one way to avoid electric shock risks. 3. Replace damaged supply cords with the manufacturer, service provider, or qualified person for safety. 4. Don't touch, cover, or block steam vents at top cooker as they are very hot and may cause burns. 5. Only use on 120V AC power outlets. 6. Never pull cord but always unplug from plug gripping area. 7. Run this appliance on separate electrical circuit from other appliances. 8. Make sure the inner pot is dry before using it or else cooking might be damaged. 9. Use caution when opening cooker lid during or after cooking as hot steam may escape and cause burns. 10. Don't leave rice in inner pot with Keep Warm function for more than 12 hours to avoid damage. Important Safety Information for Aroma Housewares Appliance: 1. Do not use the appliance outdoors. 2. Keep the cord away from hot surfaces, counters, and tables. 3. Never place the appliance near a burner or in an oven. 4. Only use the appliance for its intended purpose. 5. Be cautious when moving the appliance with rice, oil, or liquids inside. 6. Do not touch or obstruct the steam vent on top of the cooker as it gets extremely hot and may cause scalding. Electrical Safety Precautions: 1. A short power cord is provided to reduce tripping hazards. 2. Longer extension cords can be used if their electrical rating meets the appliance's requirements. 3. The polarized plug must fit into a polarized outlet only one way; reverse the plug if it doesn't fit fully. Operating Instructions: 1. Read all instructions and safety guidelines before using the appliance. 2. Remove packaging materials and check for any damage or missing items. 3. Dispose of plastic bags properly, as they can pose a risk to children. 4. Use only with a 120V AC power outlet. 5. Unplug from the plug gripping area; never pull on the cord. Maintenance and Cleaning: 1. Clean the lid and accessories in warm, soapy water. 2. Rinse and dry thoroughly before returning them to the cooker. 3. Wipe the cooker's body clean with a damp cloth. 4. Do not wrap or tie the cord around the appliance. 5. Intended for countertop use only; do not use for deep frying.

Rice cooker aroma instructions. How to use aroma rice cooker 6 cup. How to use aroma digital rice cooker. Aroma 6-cup rice cooker recipes. Aroma rice cooker instructions 1 cup. Aroma 6 cup rice cooker instructions.